



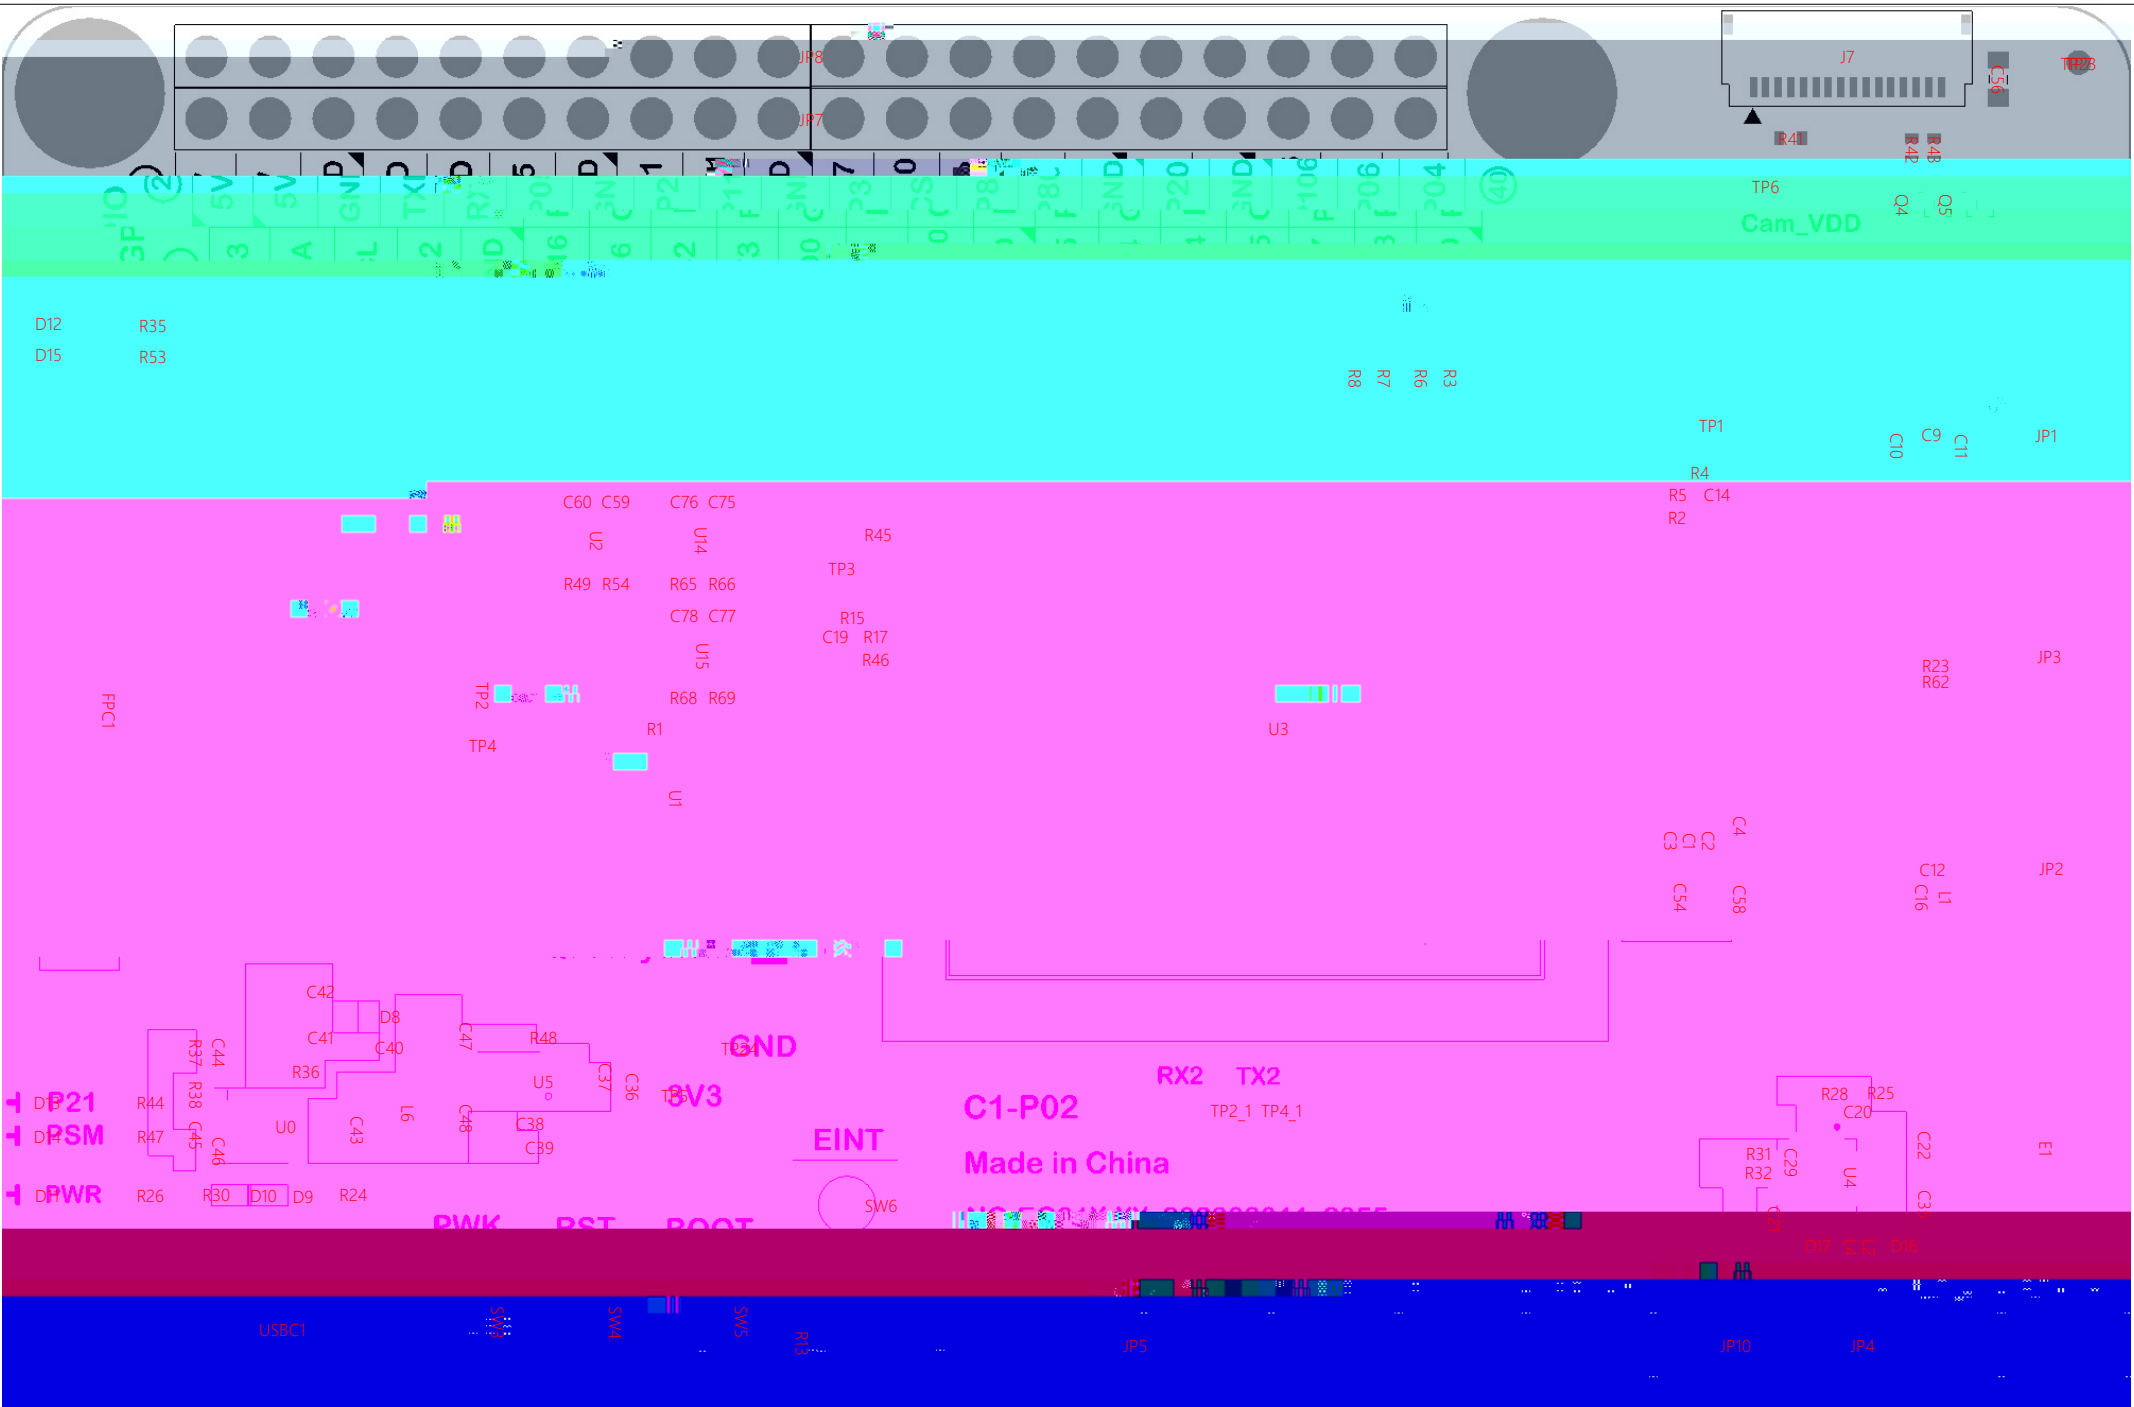

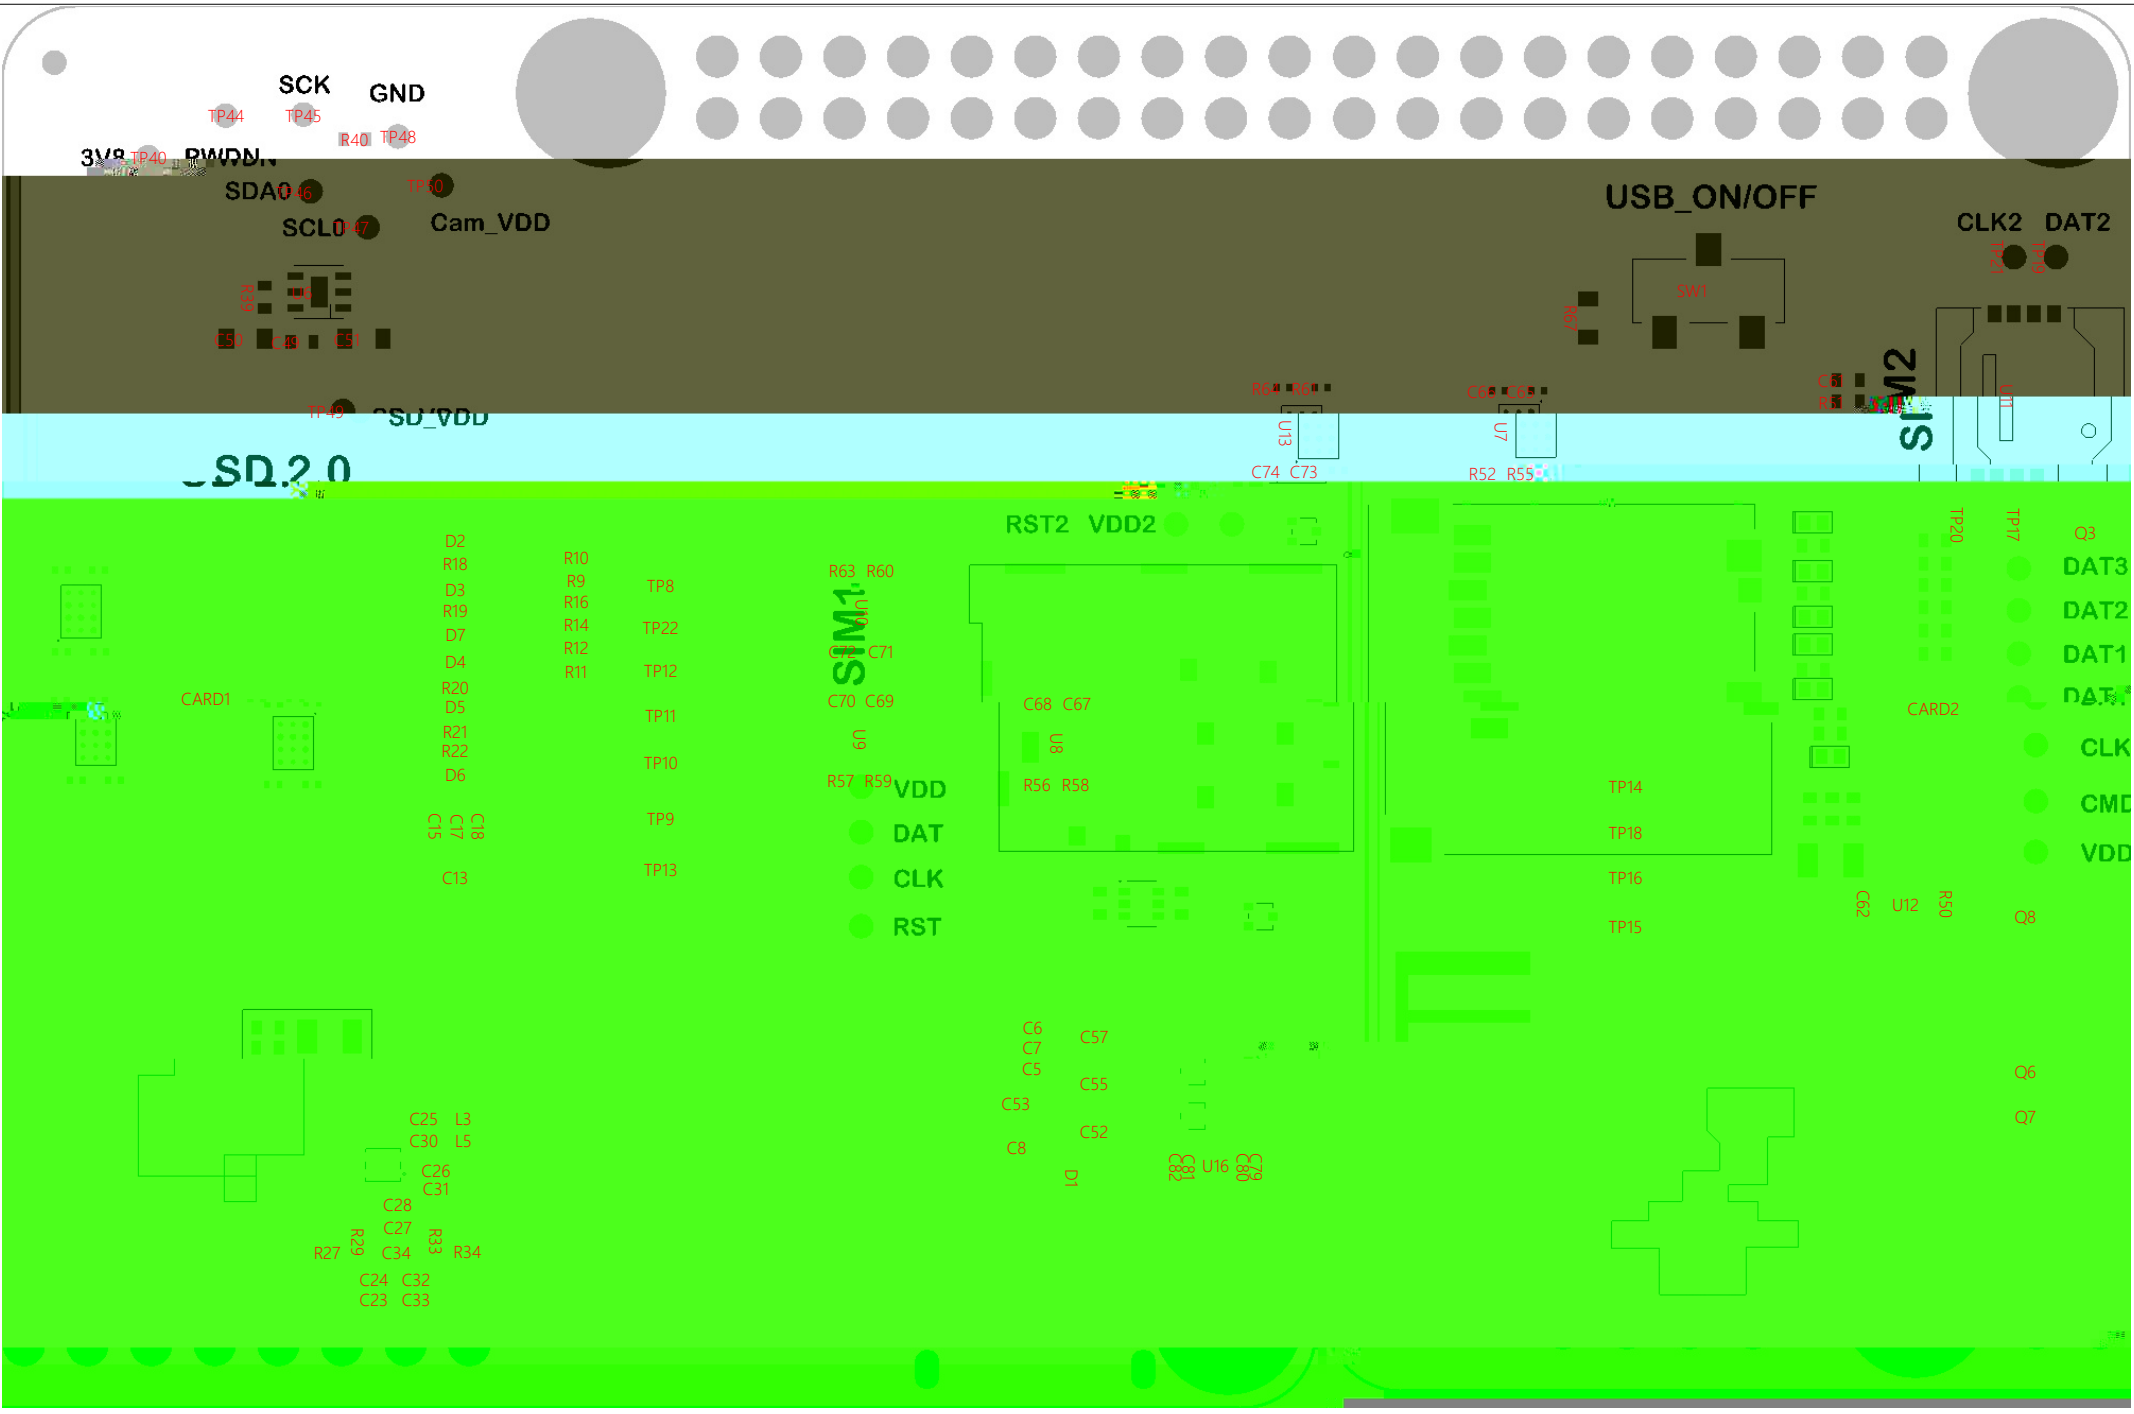

SCK

GND

TP44

TP45

R40

TP48

3V8

TP40

PWDN

SDA0

TP46

SCL0

TP47

Cam_VDD

C64

C50

C49

C5

TP49

SD_VDD

SD.2.0

USB_ON/OFF

CLK2 DAT2

SW1

SIM2

U10

R54

U13

C74 C73

C6

U7

R52 R53

C8

U11

R50

D2
R18
D3
R19
D7
D4
R20
D5
R21
R22
D6

R10
R9
R16
R14
R12
R11

TP8
TP22
TP12
TP11
TP10
TP9
TP13

R63 R60
C70 C71
C69

6N

R57 R59

VDD

DAT

CLK

RST

RST2 VDD2

C68 C67

8N

R56 R58

C6

C7

C5

C53

C8

C57

C55

C52

10

U16

C3

8N

TP14

TP18

TP16

TP15

CARD2

C62

U12

R50

TP17

Q3

DAT3

DAT2

DAT1

DAT0

CLK

CMD

VDD

Q8

Q6

Q7